



Samsung Galaxy S4 Mini SD Card Replacement

This guide will show how to replace a faulty memory card.

Written By: Arletty



INTRODUCTION

If you're finding that you cannot install anything new or save any pictures it is most likely due to the fact that the memory card on the phone is full.



TOOLS:

- [iFixit Opening Tools](#) (1)



PARTS:

- [Memory Card](#) (1)

Step 1 — Turn off the cell phone



- Keep press the END key to turn off the phone (if turned on).

Step 2 — Open the cell phone




- Pull out the back cover of the cell phone with the help of a plastic opening tool.

Step 3 — Remove the battery



- Pull up the battery.

Step 4 — Remove the memory card

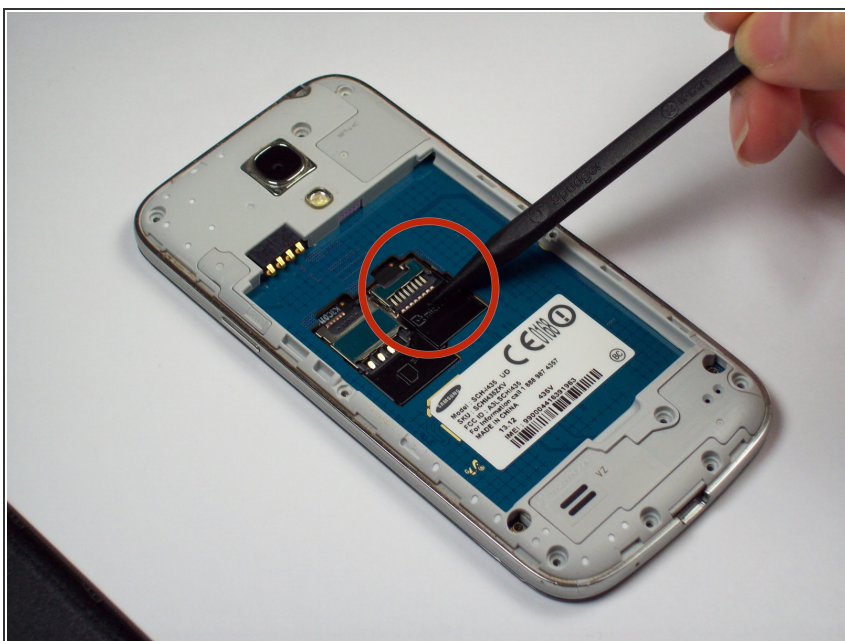

- Using your fingernail push through the hole at the top of the memory card holder, so it can be slid out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 10:42:23 PM.